SPACE MOUNT KIT
INSTALLATION INSTRUCTIONS

1. Assemble the Launch Pad Diving Board following the supplied instruction and viewing the installation video.

2. Place the Launch Pad Diving Board at your desired mounting location and confirm the following: The floor decking is a least ¾” thick. Make sure the locations of the four space mounting holes are NOT interfering with cross-member support or any other deck intrusions such as wiring. Check to make sure the selected mounting locations clear the cross-members enough to allow for proper placement of the retaining washer on the underside of the boat’s flooring surface.

3. Take a sharpie pen and mark the four holes as shown in below photo. The center hole will not be used when using Space Mount Kit

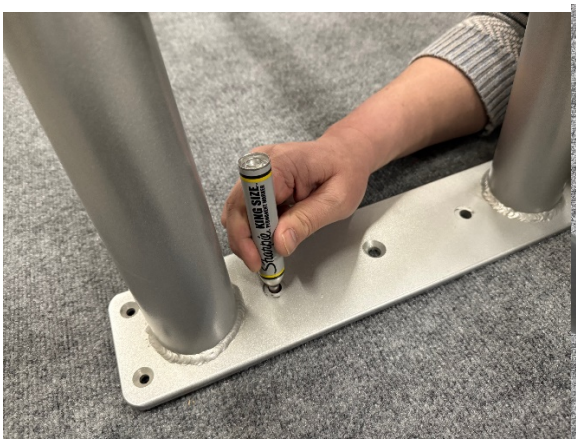
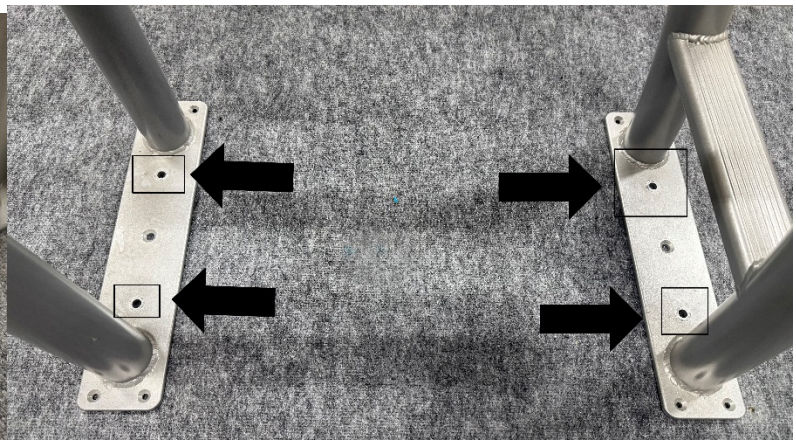

4. Using a 5/8” drill bit, drill the four space mounting holes in the mounting locations.

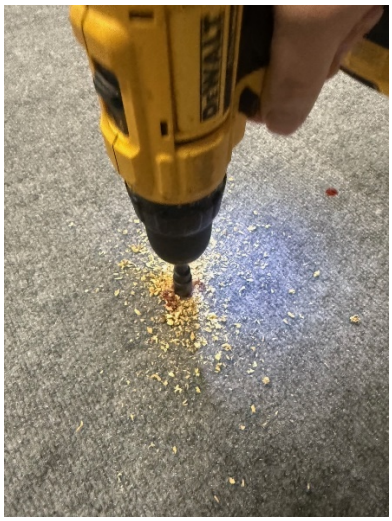

5. Insert the Space Mounts into the mounting locations. Tap the space mount into the hole with a rubber mallet. Space mount should fit tightly.

6. Install the retaining washer (teeth facing up and into the plywood) followed by the 7/8” locking nut. Tighten using a 7/8” wrench or socket. DO NOT use power tools to tighten.

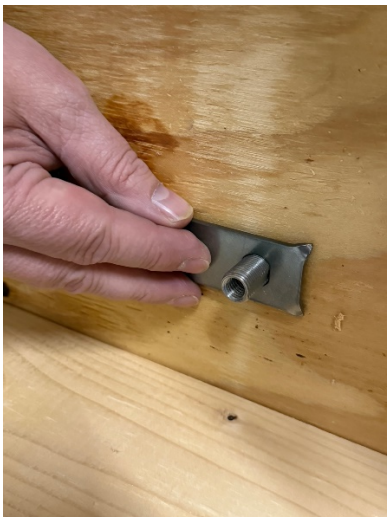

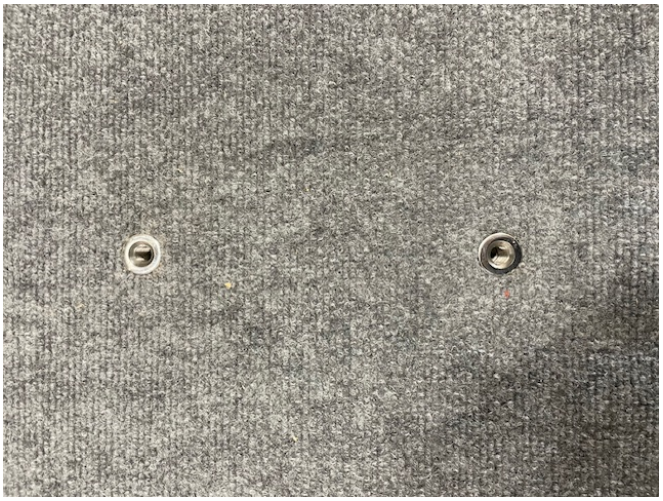

7. Now you are ready to install your Launch Pad Diving Board with the Eye Bolts supplied.